




Instructions | Part#: 995-912



York to Sanden Compressor Mount Kit

Fits Compressor applications with 2.30", 2.82", and 2.90" Gauge Lines

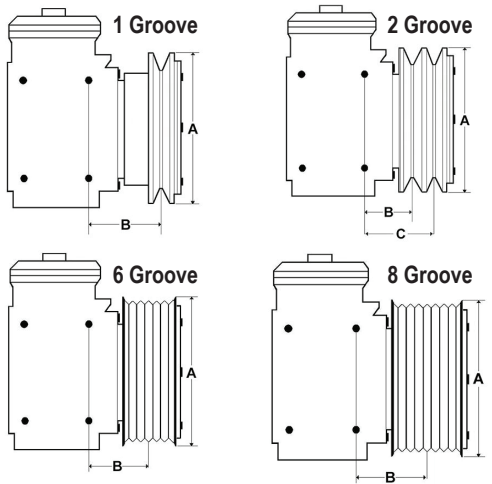


B = Gauge Line measurement

Part Number
Always to the rear of Compressor

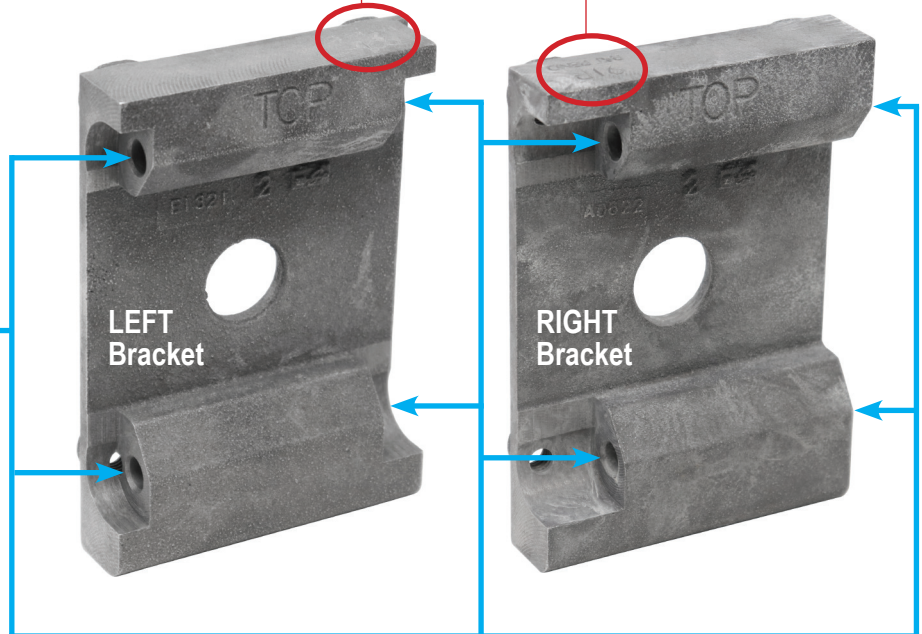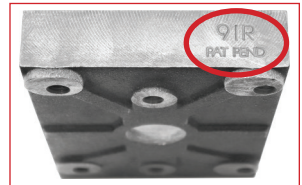

Add 1 Spacer to each
Mounting Hole
Both Brackets

Installed Picture

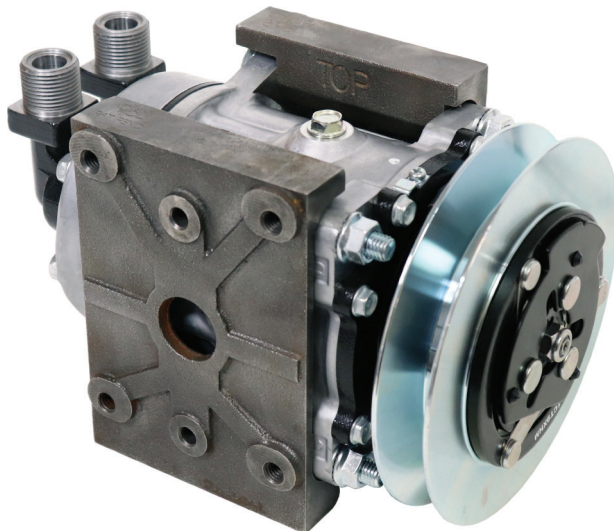

Parts Kit Picture

